TOASTER OVEN

USER'S MANUAL

Model No.: IEO-42L10

www.ices-electronics.com

Many thanks for purchasing this electric oven.
We would particularly advise that you carefully read the operating instructions before attempting to operate the unit.

SPECIFICATION

Model NO.	IEO-42L10
Power supply	220-240Vac 50Hz
Power consume	1800W
Package measurement	600*420*436mm

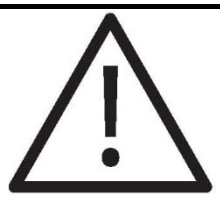

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliances is used by or near children.
4. To protect against electric shock, do not place any part of the electric oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions , or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
8. Unplug from outlet when not in use, or before cleaning.
9. To disconnect, turn the control to STOP, then unplug the plug. Always hold the plug, but never pull the cord.
10. Do not cover BAKE TRAY or any part of oven with metal foil. This may cause overheating of the oven.
11. Do not clean with metal scouring pads.
12. Oversized foods or metal utensils must not be inserted in an electric oven as they may create a fire or risk of electric shock.
13. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.

14. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
15. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
16. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
17. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
18. This appliance has a tempered，safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door gas a scratch or nick, do not use.
19. Do not use outdoors.
20. Do not use appliance for other than intended use.
21. This appliance is for HOUSEHOLD USE ONLY.
22. The temperature of the door or the outer surface may be higher when the appliance is working.

HOW TO USE

PREPARATION BEFORE USE
Before using your electric oven for the first time, be sure to:
1. Read all instructions included in this manual.
2. Make sure oven is unplugged and Time Knob is in the "OFF" position.
3. Remove all accessories. Wash in hot soapy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new electric oven with Grill Rack and Food Tray.
5. It may result in smell or smoke for the first use. This is normal.It is due to the protective substance on heating elements, which avoids salt effects during shipping from factory. So it is recommend to operate oven dry for about 15 minutes at the first, moreover, make sure to keep good ventilation of the room.

Please familiarise yourself with the following oven functions and accessories prior to first use:
- **Temperature Knob:** Choose desired temperature from 0℃ to 250℃.
- **Heating Element Selection:** Choose whether to cook from top, bottom or all oven.
- **Timer Knob:** Turn control to the right(clockwise) and the oven will turn off automatically at the end of the selected time and a bell will

ring. When setting the Timer to less than 5 min, turn it to more than 6 min. and then back to the selected time.

- **Power Indicator:** It is illuminated whenever oven is turned on.
- **Grill Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.
- **Food Tray:** For use in broiling and roasting meat, poultry, fish, and various other foods.

Operation

- Place food to be cooked directly on to wire rack/in food tray.
- Close the oven door
- Select proper temperature by the Temperature Knob.
- Preset proper cooking time and start the oven.
- Make sure to turn Timer Knob to “0” for turning off the oven when cooking is completed.

NOTE: All toasting timing is based on meats at refrigerator temperature. Frozen meats may take considerably longer. Therefore, use of a meat thermometer is highly recommended.

CLEANING AND CARE

MAINTENANCE**:**

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

Warning! Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

CLEANING:

To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid. The exterior surface of the appliance should be cleaned with a clean damp cloth only.

The oven features a Quick-Clean internal coating. If desired, wipe walls with damp cloth moistened with mild detergent.

Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door with a clean damp cloth,and dry with a paper or cloth towel. Clean exterior with damp cloth.

DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE.
ALWAYS UNPLUG THE OVEN AND ALLOW IT COOLING BEFORE CLEANING.
DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING!

STORAGE:
Unplug unit, allow cooling, clean before storing. Store Electric Oven it its box in a clean, dry place. Never store appliance white it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the back of the oven. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

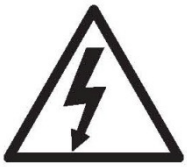

CAUTION
RISK OF ELECTRIC SHOCK

DO NOT OPEN

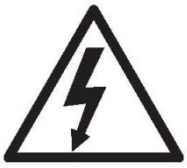

The lightening flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure: that may be of sufficient magnitude to constitute a risk of electric shock to person.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance(servicing)instructions in the literature accompanying the product.

CAUTION!

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.

Important precautions

Please read carefully all these instructions

This appliance is not intended to be put in operation using an external timer or an external remote control system.

This appliance is not aimed to be used by persons (including children) whose physical, sensitive or mental abilities are reduced, or who don't have knowledge or experience of its use, unless they have been previously instructed about the use of this appliance, or are under surveillance of someone responsible for their safety.

This appliance can be used by children from 8 years old and the people with little experience or knowledge or whose physical, sensorial or mental abilities are reduced, if they have been trained and supervised regarding the safe use of this appliance and are aware of the risks. Children should not play with this appliance. The cleaning and maintenance by the user should not be made by children unless they are over 8 years old and under supervision.

Keep this appliance and the power cord away from children under 8 years old.

Your appliance was intended for domestic use only. It was not designed to be used in the following cases which are not covered by the warranty: -

- In kitchen spaces for the staff in shops, offices and other work environment,
- In farm houses
- By the guests in hotels, motels and other residential type environments,
- In environments such as Bed & Breakfasts.

If the power cable is damaged, it must be replaced by the producer, its support service center or persons with similar qualification so as to prevent any risk.

WEE / ENVIRONMENTAL PROTECTION

Service and support

For information: http://www.ices-electronics.com/
For support: http://icessupport.zendesk.com

ICES helpdesk:

Germany	0900-1520530	(Local charges)
The Netherlands	0900-23553626	(Local charges + 1ct P/min)
Belgium	02-6200115	(Local charges)
France	0170480005	(Local charges)

The helpdesk is accessible from Monday to Friday from 9 AM till 6 PM.
In case your device needs repair, our helpdesk will redirect you to your local dealer.

ICES offers service and warranty in accordance to European law, which means that in case of repair (both during and after the warranty period), you should contact your local dealer.

Please note: It is not possible to send products directly to ICES for repair.

Important note: If this unit will be opened, or accessed in any way by a non-official service center, the warranty expires immediately.

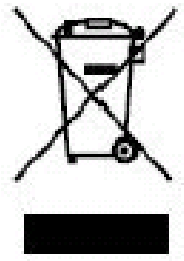

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.
The declaration of conformity may be consulted at http://www.stl.nl/supportfiles/ices/CE/jhlsagud6r592g45986.pdf

®All rights reserved